



RMB Installation

This guide provides installation instructions for the Rear Member Brace.

Tools Required

Ratchet, 12mm Socket, 17mm Socket, Torque Wrench

Installation Notes

It is best to have the car on a flat, level surface for the installation of this brace. Ideally, the car should be placed on jack stands. You do not want to install bracing with the car jacked up from one side.

Steps

1. Remove 1 rear gas tank bolt using a 12mm socket (1x.) NOTE: Do not remove both or the gas tank will fall.

2. Hold the RMB in place as close as possible.

3. Insert the removed gas tank bolt & hand tighten. You want this bolt loose enough to be able to loosen the next gas tank bolt without the tank falling. If you are unsure, support the gas tank at this time. I was able to remove 1 bolt, put the brace in place, slightly tighten, then pull down gently to remove the next gas tank bolt, push the brace in place, reinsert the bolt & tighten.

4. Snug the gas tank bolts just enough to raise the rear of the brace as shown in the picture below. The RMB should now be hanging from the rear gas tank bolts with just enough slack to expose the rear mounting points (12mm.)



5. Remove the bolts from the rear mounting location using a 17mm socket.



6. Reinsert & hand tighten, repeat on the other side. You may find it necessary to push out on the wheel to get the bolt back in place. In fact it is a good idea to put some pressure on the wheel while removing the bolt to prevent it from slipping out of position when the bolt is removed.





7. Hand tighten all RMB mounting bolts (4x.)
8. Torque the 2 gas tank bolts to spec 24 ft/lbs (2x.)
9. Torque the 2 rear mounting bolts to spec 58 ft/lbs (2x.)



10. Remove the upper strut rod bolt for the RMB extension braces installation.



11. Hold the RMB extension brace in place & reinsert the strut rod bolt using a 17mm socket.
12. Hand tighten only.



13. Use the supplied nut, bolt & washers to connect the RMB extension to the RMB x2.
14. Hand tighten only.
15. Repeat for the other side.



16. Snug all bolts using a ratchet & appropriate socket (x4.)
17. Torque the strut rod bolt to spec 58 ft/lbs using a 17mm socket (x2.)



18. Torque the RMB extension bolts to spec 24 ft/lbs using a 12mm socket (x2.)



Typical order of Installation

1. FSTB
2. RSTB
3. BP or MSMB
4. FMB
5. RLCB
6. RMB

Disclaimer: Proper service & repair procedures are vital to the safe, reliable operation of all motor vehicles as well as the personal safety of those performing the repairs. Standard safety procedures & precautions (including use of safety equipment & proper tools) should be followed at all times to eliminate the possibility of personal injury or improper service which could damage the vehicle or compromise its safety. Although this material has been prepared with the intent to provide reliable information, no warranty (express or implied) is made as to its accuracy or completeness. Neither is any liability assumed for loss or damage resulting from reliance on this material. SPECIFICALLY, NO WARRANTY OF MERCHANTABILITY FITNESS FOR A PARTICULAR PURPOSE OR ANY OTHER WARRANTY IS MADE OR TO BE IMPLIED WITH RESPECT TO THIS MATERIAL. In no event will Corky & Co., llc. or its affiliates be liable for any damages, direct or indirect, consequential or compensatory, arising out of the use of this material.

THE INFORMATION, PRODUCTS, MATERIALS & SERVICES CONTAINED IN THIS DOCUMENT, INCLUDING WITHOUT LIMITATION, GRAPHICS, TEXT & LINKS ARE PROVIDED ON AN "AS IS" BASIS WITH NO WARRANTY OF MERCHANTABILITY FITNESS FOR A SPECIFIC USE OR REPRESENTATION OF ACCURACY.

Limitation of Liability: IN NO EVENT SHALL CORKY & CO., LLC. BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, PUNITIVE, CONSEQUENTIAL OR ANY OTHER DAMAGES WHATSOEVER, WHETHER IN ACTION OR UNDER CONTRACT, TORT OR OTHERWISE. Under no circumstance, including but not limited to, negligence, shall Corky & Co., llc. Be liable for any damages that result from the use of, or inability to use, the information, materials or products contained in or purchased from Corky & Co., llc. Further, Corky & Co., llc. shall have no liability or responsibility for any delay in the delivery, installation or use of the products, as well as the service life of the products, performance, crash worthiness, applicability for the use intended, proper installation, or the accuracy of information provided.